

SALES FACT SHEET





RBHM-SERIES Air Handler

GENERAL TERMS OF LIMITED WARRANTY

Rheem will furnish a replacement for any part of this product which fails in normal use and service within the applicable period stated, in accordance with the terms of the limited warranty.

Rheem Prestige Series equipment features a 10-year limited parts warranty.* *This ten-year limited parts warranty is applicable only to single-phase products installed in residential applications.

For Complete Details of the Limited Warranty, Including Applicable Terms and Conditions, See Your Local Installer or Contact the Manufacturer for a Copy.



Features

- Versatile 3-way convertible design for upflow, horizontal left and horizontal right.
- Available from the factory in upflow and horizontal left configurations.
- Nominal airflow up to 1.0" external static pressure.
- Standard factory installed coils.
- Sturdy double wall construction with .5 inch [12.7 mm] of foil faced insulation for excellent sound and insulating characteristics.
- Designed for use with exterior high-static filters.
- Circuit breaker (standard on units with more than 11 kW) meets U.L. and cUL requirements for service disconnect.
- Factory installed auxiliary electric heat provides exact heat for indoor comfort over a variety of applications.
- Dip switch settings for selectable, customized cooling airflow over a wide variety of applications.
- On-demand dehumidification terminal that adjusts airflow to help control humidity for unsurpassed comfort in cooling mode.

[] Designates Metric Conversions

	Starting at:
Price	\$

R	В	Н	М	17	J	11	s	Q	В
Rheem	Blower Unit			Cab. Width	Electrical Designations	Electrical Heat (KW) Designation See Electrical Heat Data for Actual KW at 208 Volts.	Control Designation	Airflow Direction	Coil Code
				17 24 25	J = 208/240V, 1PH, 60HZ	00 = No Heat 06 = 4.9 kW 07 = 7.0 kW 11 = 10.0 kW 14 = 14.0 kW	N = No Circuit Breakers Single Supply Circuit S = Circuit Breaker(s) Single Supply Circuit	M = Multiposition	
wi	NOTES: 1) RBHM Air Handler cannot be ordered without coil. 2) Electrical heat designation: set electric heat data for actual heater kW represented by number above. 3) Electric heater BTUH = (heater watts + motor watts) x 3.412 (See airflow table for motor watts). 4) Air Handlers with A-Coils do not come with a factory installed air filter. External filter rack or		17 = 17.5"	J	00, 06, 07, 11 06, 07, 11	N S		Q = RCQD-2417AS	
actual heat			24 =	i	00, 07, 11	N	M = Multiposition	R = RCQD-3624AS	
watts) x 3.			24.5"	J	07, 11, 14	S			
factory ins						00, 11	N		S = RCQD-4824AS
other means of filtration is required.			24.5"	24.5"	11, 14, 18	S		3 = NUUD-4824A3	









"CERTIFIED UNDER THE A.R.I. CERTIFICATION PROGRAM-A.R.I. STANDARDS 210/240-84'